WORX®

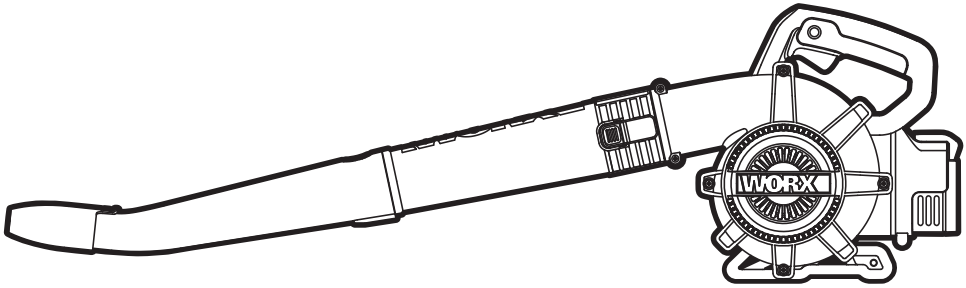

SAFETY AND OPERATING MANUAL

Cordless Li-Ion Blower/Sweeper

WG568E WG568E.9

GENERAL POWER TOOL SAFETY WARNINGS

WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

WARNING: Read all safety warnings designated by the symbol and all instructions.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

GENERAL POWER TOOL SAFETY WARNINGS - WORK AREA SAFETY

a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.

b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.

c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

GENERAL POWER TOOL SAFETY WARNINGS - ELECTRICAL SAFETY

a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.

b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.

c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.

d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.

e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.

f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

NOTE: The term "residual current device (RCD)" may be replaced by the term "ground fault circuit interrupter (GFCI)" or "earth leakage circuit breaker (ELCB)".

GENERAL POWER TOOL SAFETY WARNINGS -PERSONAL SAFETY

a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.

b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e) **Do not overreach. Keep proper footing and balance at all times.** This

enables better control of the power tool in unexpected situations.

f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

GENERAL POWER TOOL SAFETY WARNINGS -POWER TOOL USE AND CARE

a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

h) Keep handles dry, clean and free from oil and grease. Slippery handles do not allow for safe handling and control of the tool in unexpected situations.

GENERAL POWER TOOL SAFETY WARNINGS – BATTERY TOOL USE AND CARE

a) Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

b) Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

d) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

GENERAL POWER TOOL SAFETY WARNINGS - SERVICE

a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

ADDITIONAL SAFETY WARNINGS FOR CORDLESS BLOWER VACUUM

WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

INTENDED PURPOSE

WARNING! A garden vacuum-blower is not a wet suction device! Please avoid the suction of wet materials (leaves and dirt), since this can lead to blockage of the shredder chamber and reduced performance.

The device is designed only for the suction and blowing of dry leaves in private households and as a hobby device in the garden. Any other utilization, which is not explicitly approved in these directions, can lead to damage to the device and represent a serious danger to the user.

- The device **MUST NOT** be used in areas where there is health endangering dusts or as a wet suction device.
- The device is designed for use by adults. Young people over 16 years may use the device under supervision only.
- The use of the device in the rain or in a humid environment is forbidden.
- The manufacturer is not liable for damage which is caused through inappropriate use or incorrect operation.

NOTE: For the protection of the operator, the device can be operated only with assembled vacuum tube and collection bag.

NOTE: Do not employ and low power machines for heavy work. DO NOT use your device for purposes for which it has not been designed.

WARNING: To reduce the risk of injury, user must read and understand instruction manual.

1) TRAINING

a) Read the instructions carefully. Be familiar with the controls and the proper use of the appliance;
b) Never allow children to use the appliance.
c) Never allow people unfamiliar with these instructions to use the appliance. Local regulations may restrict the age of the operator;
d) Never operate the appliance while people, especially children, or pets are nearby;
e) The operator or user is responsible for accidents or hazards occurring to other people or their property.

2) PREPARATION

a) While operating the appliance, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals;
b) Do not wear loose clothing or jewellery that can be drawn into the air inlet. Keep long hair away from the air inlets.
c) Wear protective goggles while operating
d) To prevent dust irritation the wearing of a face mask is recommended
e) Never operate the appliance with defective guards or shields, or without safety devices, for example debris collector in place

3) OPERATION

a) Take off the battery from the appliance,
- when not in use;
- before clearing a blockage;
- before checking, cleaning or working on the appliance;
- If the appliance starts to vibrate abnormally.

b) Operate the appliance only in daylight or in good artificial light.

c) Do not overreach and keep your balance at all times.
d) Always be sure of your footing on slopes.
e) Walk, never run;
f) Keep all cooling air inlets clear of debris.
g) Never blow debris in the direction of bystanders.
h) Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times;
i) Never pick up or carry the appliance while the motor is running;

4) MAINTENANCE AND STORAGE

a) Keep all nuts, bolts and screws tight to be sure the appliance is in safe working condition;
b) Check the debris collector frequently for wear or deterioration.
c) Replace worn or damaged parts.
d) Use only genuine replacement parts and accessories.
e) Store the appliance only in a dry place.

SYMBOLS

Warning

To reduce the risk of injury, user must read instruction manual

Wear eye protection

Do not use in the rain or leave outdoors while it is raining

Warning of hazard

Keep bystanders away

C-Tick approval mark

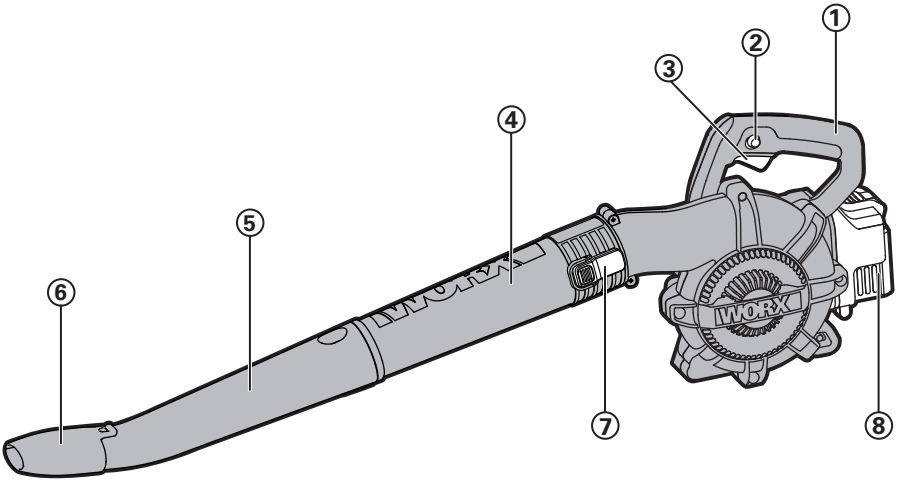
1
2
3
4
5
6
7
8

1. HANDLE
2. LOCK OFF SWITCH
3. VARIABLE SPEED TRIGGER
4. UPPER BLOWER TUBE
5. LOWER BLOWER TUBE
6. HIGH SPEED NOZZLE
7. TUBE RELEASE BUTTON
8. BATTERY PACK
9. BATTERY PACK RELEASE BUTTON (See Fig. C)

Not all the accessories illustrated or described are included in standard delivery.

TECHNICAL DATA

	WG568E	WG568E.9
Voltage	40V⎓ Max* Lithium Ion	
No load speed	12000 /min	
Blow speed	230km/h Max	
Air capacity	4m³/min Max	
Charging time	1hr approx.	
Machine weight	2.7kg	1.9kg

* Voltage measured without workload. Initial battery voltage reaches maximum of 40 volts. Nominal voltage is 36 volts.

ACCESSORIES

	WG568E	WG568E.9
Battery pack	1(WA3536)	/
Charger	1(WA3735)	/

We recommend that you purchase your accessories from the same store that sold you the tool. Use good quality accessories marked with a well-known brand name. Choose the type according to the work you intend to undertake. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

ASSEMBLY

ASSEMBLING THE BLOWER TUBE (See Fig. A & B)

⚠ ALWAYS REMOVE THE BATTERY PACK BEFORE ASSEMBLING THE BLOWER TUBE

Fit the Blower Tube to the motor housing as shown in Fig. A. Check the Blower Tube is firmly secured.

NOTE: Before disassembling the Blower Tube, be sure the variable speed trigger is on off position. Press the Release Button (7), so that you can separate the tube (See Fig. B). Do not try to separate the tubes by force or by using tools.

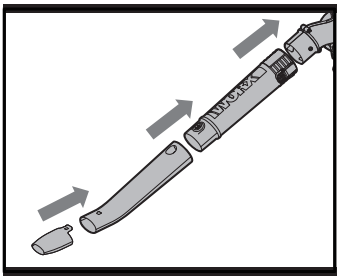

A

OPERATION

INTENDED USE:

The blower is intended for blow debris. It's not intends for use indoors and animal grooming.

⚠ **WARNING! The charger and battery pack are specially designed to work together so do not attempt to use any other devices. Never insert or allow metallic objects into your charger or battery pack connections because of an electrical failure and hazard will occur.**

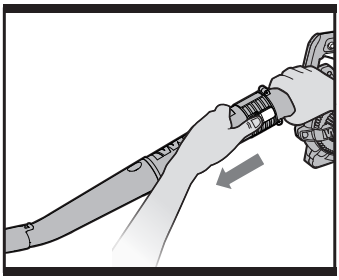

B

1. BEFORE USING YOUR CORDLESS BLOWER

Your battery pack is UNCHARGED and you must charge once before use.

The battery charger supplied is matched to the Li-ion battery installed in the machine. Do not use another battery charger.

2. CHARGING YOUR BATTERY PACK

The Li-Ion battery is protected against deep discharging. When the battery is empty, the machine is switched off by means of a protective circuit:

In a warm environment or after heavy use, the battery pack may become too hot to permit charging. Allow time for the battery to cool down before recharging.

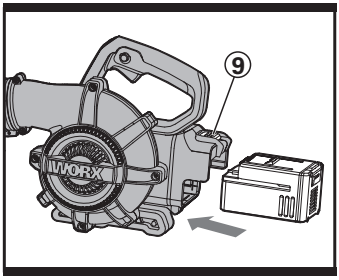

C

3. TO REMOVE OR INSTALL BATTERY PACK (See Fig. C)

Depress the Battery Release Button (9) to release battery pack from your tool. After recharging, insert the battery pack into tool's battery port. A simple push and slight pressure will be sufficient.

4.BATTERY STATUS LED'S (See Fig. D)

NOTE: The Status LED's will indicate the battery condition when the button on the battery is pressed.

The LED's constantly senses and displays the battery

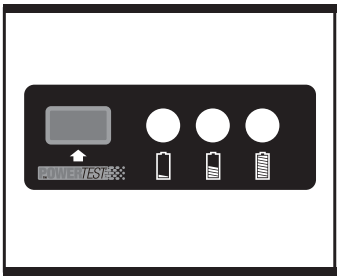

D

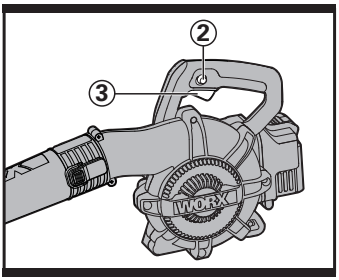

E

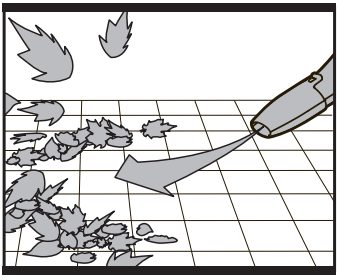

F

condition as follows:
Press the button "POWERTEST", the light button is illuminated.
When the three green lights are illuminated, the battery is in a highly charged condition.
When two lights ( ) are illuminated, the battery is in a moderately charged condition.
When only one green light ( ) is illuminated, the battery charge is depleted.

IMPORTANT:

When only one light is illuminated, your battery is overly discharged, even though the blower may still be capable of blowing debris. Continuing to operate your blower with the battery in this discharged condition may reduce the life and performance of your battery.

5. STARTING/STOPPING (See Fig. E)

Your blower is fitted with a variable speed control through the trigger. Depress the Lock OFF switch and the variable speed trigger to start your blower. To switch off, just release the variable speed trigger.

WARNING! The tool runs for a few seconds after it has been switched off. Let the motor come to a complete standstill before setting the tool down.

6. USING THE BLOWER (See Fig. F)

The blower is intended for residential use only. It is fitted with a high speed nozzle. For wet leaves, use the high speed nozzle for ideal clean during operating the blower.

USER TIPS

- Hold the blow tube approx 180mm above the ground when operating the tool.
  Use a sweeping motion from side to side. Advance slowly keeping the accumulated debris/leaves in front of you.
- After blowing the debris/leaves into a pile, it is easy to dispose of the pile.

CAUTION!

- **Do not blow hard objects such as nails, bolts, or rocks.**
- **Do not operate the blower near bystanders or pets.**
- **Use extra care when cleaning debris from stairs or other tight areas.**
- **Wear safety goggles or other suitable eye protection, long pants, and shoes.**

CLEANING THE TOOL

CLEAN THE TOOL REGULARLY.

WARNING! Keep your product dry. Under no circumstances spray with water.

- **To clean the tool, use only mild soap and a damp cloth.**
- **Do not use any type of detergent, cleaner or solvent which may contain chemicals that could seriously damage the plastic.**
- **Self lubricating bearings are used in your product, therefore lubrication is not required.**

Copyright © 2014, Positec. All Rights Reserved.
2CBV80BPK11000A1